


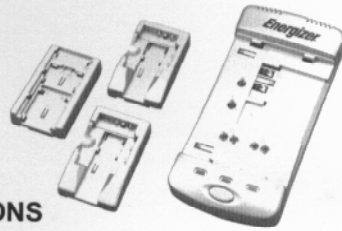

## Energizer Uni Charger OPERATING INSTRUCTIONS




PLEASE READ THE INFORMATION AND  
FOLLOW ALL INSTRUCTIONS THOROUGHLY BEFORE  
USING THIS PRODUCT

### IMPORTANT WARNING

This CHARGER is for charging rechargeable Li-Ion, NI-MH,  
SLA, and NI-CD camcorder/digital camera batteries ONLY!

Inserting any other batteries than recommended may  
damage the device, destroy the batteries and/or cause  
injury to the user.

- When connecting your charger to the cigarette lighter points  
in your car using the supplied 12v adapter, connect the socket  
end adapter into the chargers DC input socket (A) on the  
charger base and then connect the 12v adapter to the  
cigarette lighter point.
- The chargers base (B) will fit various battery types (see  
lists). To attach the battery, simply align the contacts of your  
battery with the appropriate contacts on the charger's base  
and slide into place.

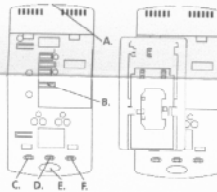

*Never force the battery onto the charger or adapter plates, as  
this may damage the charger or battery. If unsure contact  
Fameart for advice on 0116 253 0325 or Email:  
sales@fameart.co.uk*

- If your battery requires the **additional adapter plate** to be  
installed (see list): Align the contacts of the adapter plate with  
the appropriate contacts on the charger's base and slide into  
place until secure. Then attach by aligning the contacts of  
your battery with the appropriate contacts on the adapter and  
carefully slide into place.
- Confirmation that the battery is **charging**, is indicated when  
the LED marked "CHG" turns RED (C). Once the battery has  
been fully charged this will be indicated when the LED  
marked (FULL) turns GREEN (D).
- If you wish to **recondition / discharge** your battery, it is only  
recommended for use with either Ni-MH or Ni-CD batteries  
(not Lithium & SLA). Discharging once in a while will help  
reduce the memory effects and help retain battery  
performance. To discharge your battery press the button (E)  
located under the green LED/FULL light (D), once pressed,  
the orange LED marked (DIS) will light up. This will indicate  
that the battery is discharging. Once discharged the charger  
will automatically revert to charge mode.
- Locate the supplied **mains adapter** and connect the socket  
end adapter into the charger's DC input socket (A), then  
connect the 3 pin plug into the mains socket and switch on.

**NOTE:** It is normal for the charger to become warm when  
charging. If the charger fails to charge the battery  
sufficiently, check to see if the battery is exhausted,  
faulty or at the end of its life cycle.

All rechargeable batteries eventually become exhausted  
after being charged a certain number of cycles. Always  
keep metal contacts on both the charger and battery  
clean by wiping the surfaces with a dry, soft, clean cloth  
and never store or carry batteries with loose objects  
such as keys, coins or any metallic object as this may  
short the battery.

**Energizer Uni Charger BASE :** CANON, BP-E77, BP-711,  
BP-714, BP-720, BP-726, CA77, CA77H HITACHI VM-BP82,  
VW-BP83, VW-BP84, HB82, HB82H JVC BN-V11U, BN-  
V12U, BN-V18U, BN-V20, BN-V22, NVS1, NVS2, NVS2H  
PANASONIC VW-VBS1E, VW-VBS2E, NVS1, NVS2H  
SHARP BT-80, BT-77 SONY NP-55, NP-66, NP-67, NP-68,  
NP-77, NP-78, NP-98

**ADAPTER PLATE 02 :** CANON BP-511, BP-512, BP-522,  
BP-535, NB-2L, CA2L NIKON EN-EL1

**ADAPTER PLATE 07 :** FUJI NP40, NP60, NP80, NP100,  
NP120 JVC BNV-712, BNV-714 KODAK KLIV-3000, KLIV-5000  
PENTAX D-Li2 RICOH DB-20, DB-30, DB-40 TOSHIBA NP100,  
PDR-BT1, PDR-BT2, PDR-BT4A, PDR-BT2A, PDR-BT3

**ADAPTER PLATE 09 :** CANON NB-1L, NIKON, EN-EL2  
OLYMPUS Li-10B, OL10

**ADAPTER PLATE 26 :** CANON BP-80, BP-85 HITACHI VM-  
BPL13A, VM-BPL27, VM-BPL30, VM-BPL60 JVC BNV607,  
BNV615, BNV812, BNV814 PANASONIC VW-VBD1,  
CGRB202E SONY NP-FF50, NP-FF70, NPFP-50, NPFP-70,  
NPFP-90, NP-F330, NP-F530, NP-F550, NP-F750, NP-F950,  
NP-FM30, NP-FM50, NP-FM70, NP-FM90, NP-QM50

### CAUTIONS:

- Always unplug the charger when not in use.
- Always unplug the charger from the power source before  
cleaning.
- Do not use, place or store the charger where it may come into  
contact with water or moisture.
- Do not use in car when it is unattended or when the charger  
is in direct sunlight.
- Do not short-circuit the metal contacts of the battery and  
charger.
- Do not disassemble, deform or reconstruct any part of the  
charger.
- Use this charger with the AC adapter or via cigarette lighter  
points in your car with the supplied DC cord in this package only.
- It is recommended to first discharge and then charge your Ni-  
Cd or NI-MH battery once every 3-4 weeks.
- Do not discharge a Li-ion or Sealed Lead Acid battery prior to  
charge.